DOOR ACCESSORIES



LAPCON DOOR DAMPER (RECESSED TYPE)













- Door damper unit for interior, swinging doors.
 Grips door at final 10° and softly, self-closes doors more gently compared to other door closers, putting less stress on the hinges.
- "Invisible" design minimizes visibility of the hardware.
- Recommended Door Specifications: Thickness: minimum 33 mm (1-5/16") Width: maximum 914 mm (3' 0")
- Weight: 15~40 kg (33~88 lbs)
- Can be adjusted for door weight after installation. Counterplate position can be easily adjusted by removing cover and turning micro-adjustment screws.
- · Can be used with HES hinges (P.180~189), sold separately.
- Includes screws and paper template for installation.


LDD-V-R is shown









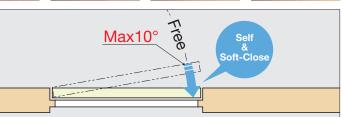











LDD-V-R is shown

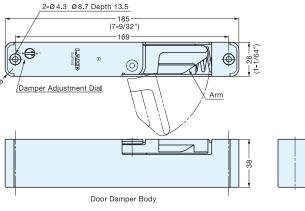

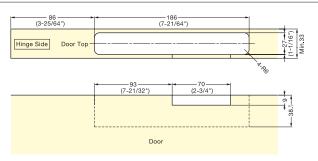

Bore Dimensions (Door)

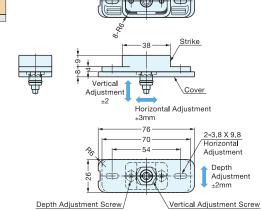


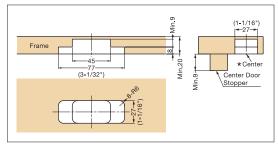



Bore Dimensions (Frame)


Part Name	Material	Finish/Color	
Main Body	Steel/Polyacetal/PBT	Chromate/Grey	
Counter Plate	Steel/Polyacetal	Nickel/Grey	

Ì	Item No.	Туре	Door Weight	Door Width (mm)	Door Thickness (mm)	Box (pc)	Carton (pcs)
	LDD-V-R	Right	15~40 kg (33~88 lbs)	Max. 914 (3' 0")	Min. 33 (1-19/64")	1	24
	LDD-V-L	Left					

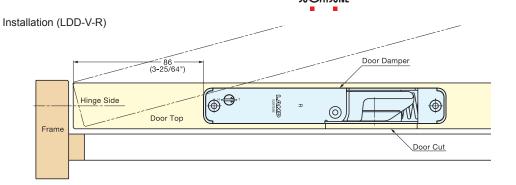

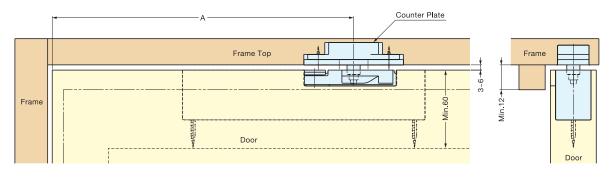

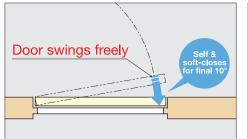

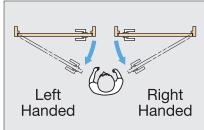

Hinge	A	
HES3D-120	219	
HES3D-V135LGR	217	
HES3D-160	220	
HES3D-E190		
3535/SS	223	

*Dimension A depends on type of hinge used

Please take the following precautions when considering this hardware for your application:

- For interior use at room temperature (32~104°F, 0~40°C) only-not intended for use under high winds, high temperature or humidity, or where the hardware may get wet.

- Effectiveness may decrease over time if door is slammed closed continuously.
 Closing performance may vary depending on door latch bolt.
 If being used at the entrance of a room where air cannot move freely (vault, cellar, etc.), the ambient air pressure may affect the closing speed and power of the hardware.
- Do not hang on/hang anything on the arm as it may damage the hardware.
 Please read the installation instructions included with the hardware fully before installation.
- After installation and during normal use, please check the fasteners and hardware on a regular basis.



