LAMP. BCTS-85J TENSION CATCH INSTALLATION INSTRACTIONS


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation.

DIMENSIONS ASSEMBLY Assemble in order from 1 to 3. 30 Body 16 -6 Indicator 16 16.5 -7.5 ŝ o. Đ N 22 85.73 Ś 8 T Recommended screw: Bind head screw M5 Ø Q Counter plate 2×\$5.5 Inner plate

ADJUSTMENT OF CATCH FORCE

A Caution -

- Default setting of catch force is "Medium". To make it stronger or weaker turn both of the adjustment screws.
- · Make the adjustment level equal on both sides.
- The pushing force and pulling force vary.

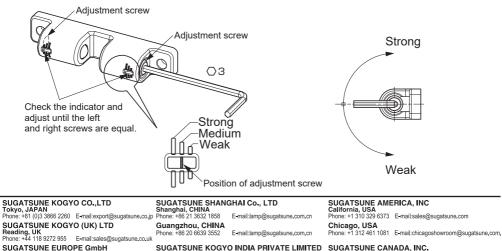

Düsseldori, CERMANY Phone: +49 211 53612900 E-mail:sales@sugatsune.in ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.