# LAMP. GS-GL20 SWING DOOR LOCK INSTALLATION MANUAL


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

**GLASS CUTOUT DIMENSIONS FOR STRIKE** DIMENSIONS The drawing below shows a 6 mm thick door. 55/64" (22) Thickness: 15/64", 5/16", 25/64" (6, 8, 10 mm) ¾¹ Recommended dimensions (consult a glass supplier) \$12 depth13 or more **1-37/64" (40) →** Ø10  $(20)^{-}$ Bottom 7/16" (11) board 19/64" (7.6)-27/32" (21.5) 2-7/16" 15/64", 5/16", 25/64" 57/64" (22.5) (6,8,10 mm) 1-1/64" (27. 1/8" ~ 9/32" (3~7 mm) 25/64" (10) Side 3/64" (1) 1-13/16" - (46) board 2-9/32" (58) \* Glass

### 1 Parts Assembly

INSTALLATION

<sup>3</sup> № No. of spacers according to the Front plate glass thickness

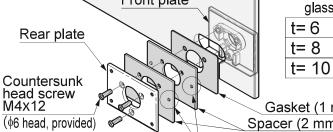

Gasket (1 mm) Spacer (2 mm) \*2

Ø 11.5 (outside diameter of strike)


0

The drawing shows the view from the back.

Tightening torque: 0.6 N·m

## 2 Mounting of Body

Mount the body to the rear plate with the provided screws.

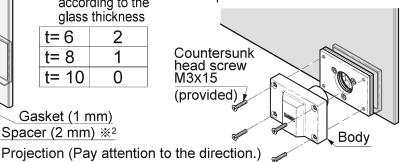


#### 3 Mounting of Strike

It is recommended to use shatter-proof film on the glass. For areas where the glass

brackets grip, make sure to remove the shatter-proof film before installing.

Mount the strike with the provided screws.

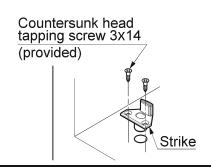



#### SUGATSUNE AMERICA

1-800-562-5267 sugatsune.com