
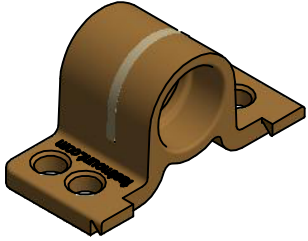
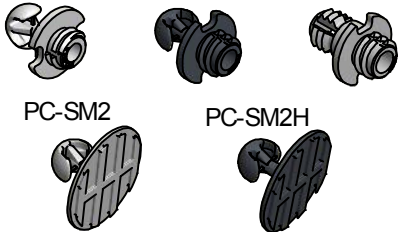
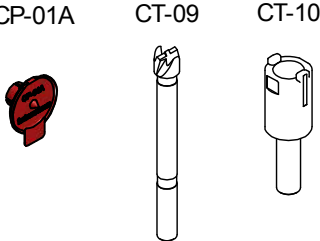
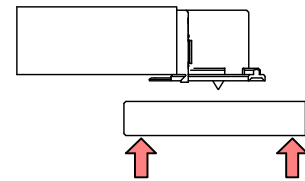



PC-RF1 Side mount female

	<p>USE WITH:</p> <p>PC-M1A PC-M2H VS-M1</p> <p>PC-SM2 PC-SM2H</p> 	<p>INSTALL WITH:</p> <p>CP-01A CT-09 CT-10</p> 
<p>INSTALLATION STEPS</p>		


- 1 Screw fit PC-RF1 to side of frame
- 2 Fit CP-01A into PC-RF1
- 3 Press panel onto CP-01A to mark

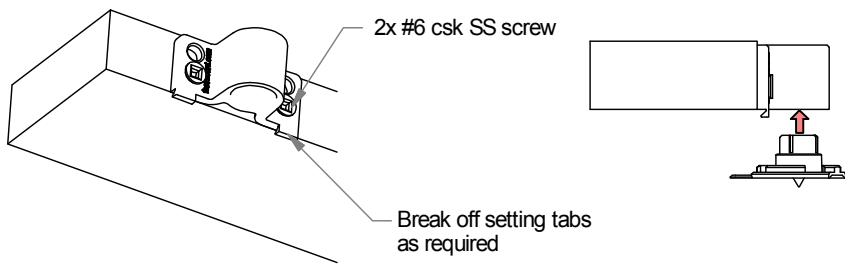


- 4 Drill panel on mark with CT-09

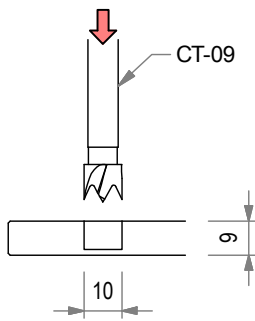

- 5 Screw fit male clip with CT-10

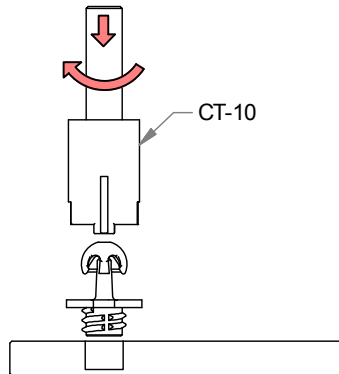


- 6 Panel clipped in place

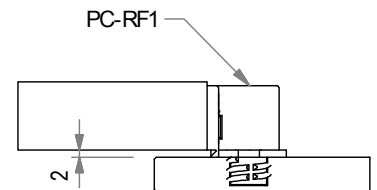


OPTION WITH ADHESIVE FIT MALE (complete 1 above)


- A Clip PC-SM2 into PC-RF1

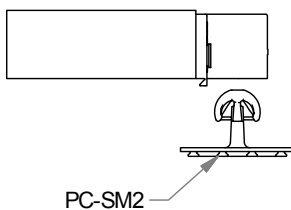

- B Apply adhesive to PC-SM2

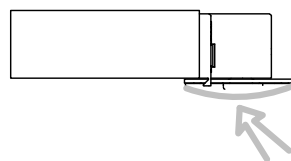

- C Place panel & support while adhesive dries

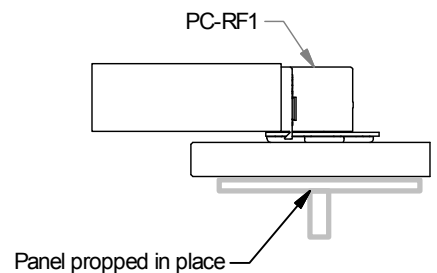

MORE INFO: Setout Guide TD-02